



Samsung Galaxy S Advance Teardown

Follow this complete disassembly to replace the parts that are damaged in your phone

Written By: Smilzo



Step 1 — Samsung Galaxy S Advance Teardown



- Remove back cover

Step 2





- remove battery

Step 3



- Remove the 6 screws

Step 4

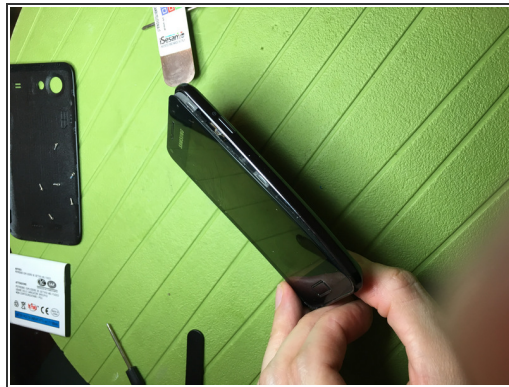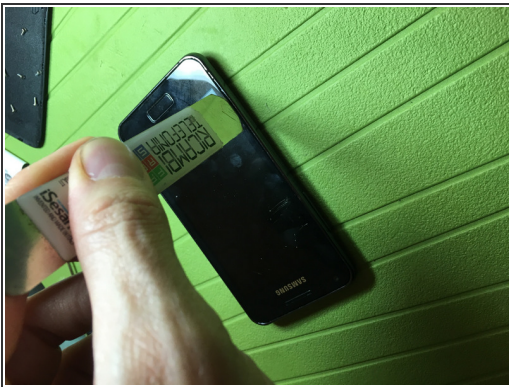

- With a thin tool to pry between the glass and frame to release it
- Remove the middle frame

Step 5



- Unhook the rear speaker connector
- Unhook the connector front camera and light sensor
- Unhook display connector

Step 6




- Disconnect the power button flat
- Disconnect flat volume keys
- Disconnect white cable

Step 7





- Remove the rear speaker
- Remove the screw, and lift the motherboard
- Remove the front speaker

Step 8

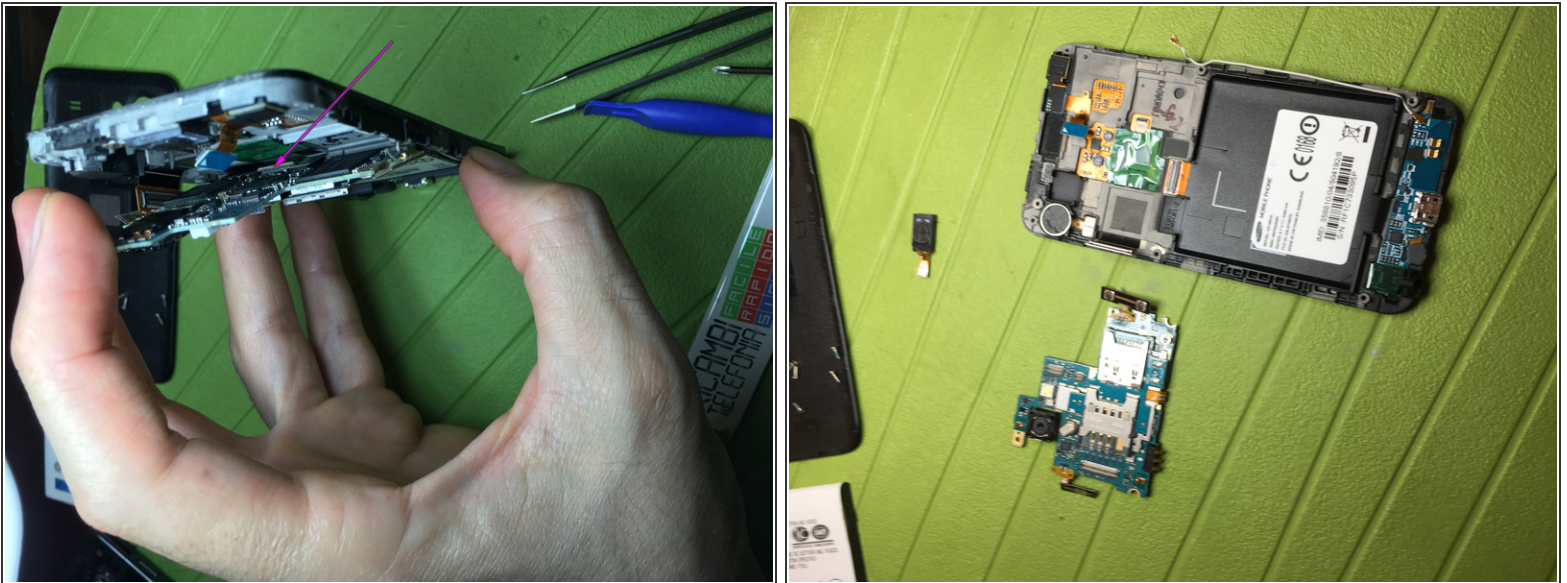

- Disconnect connector under motherboard
- remove the motherboard

Step 9

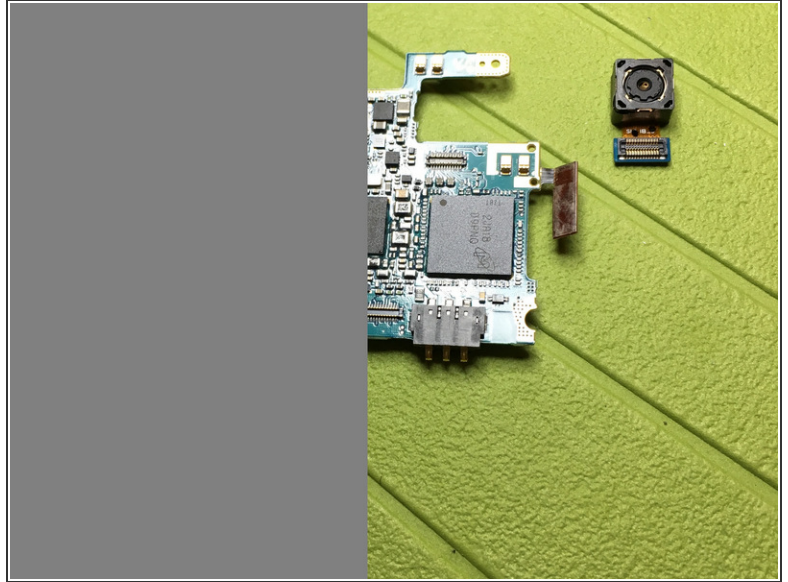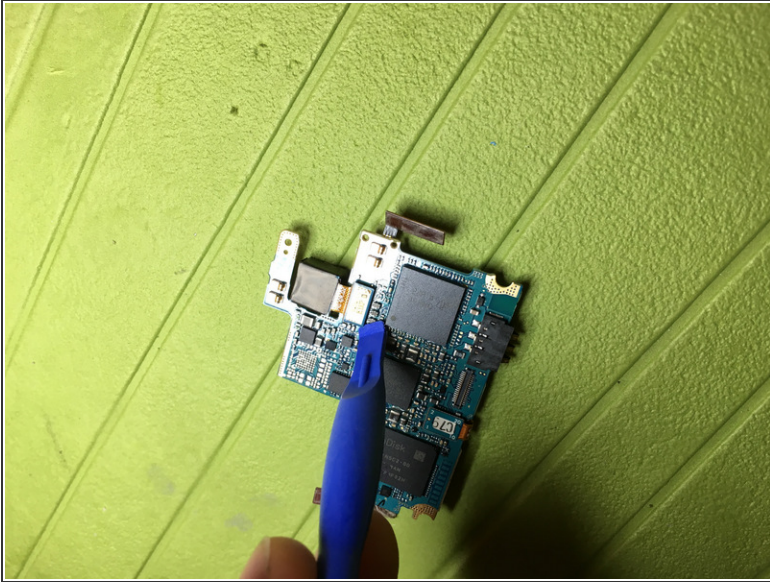

- Unhook the rear camera connector
- remove camera

Step 10




- Remove front camera and light sensor

Step 11




- Raise adhesive with heat help
- Unhook microphone
- Unhook the lower board

Step 12

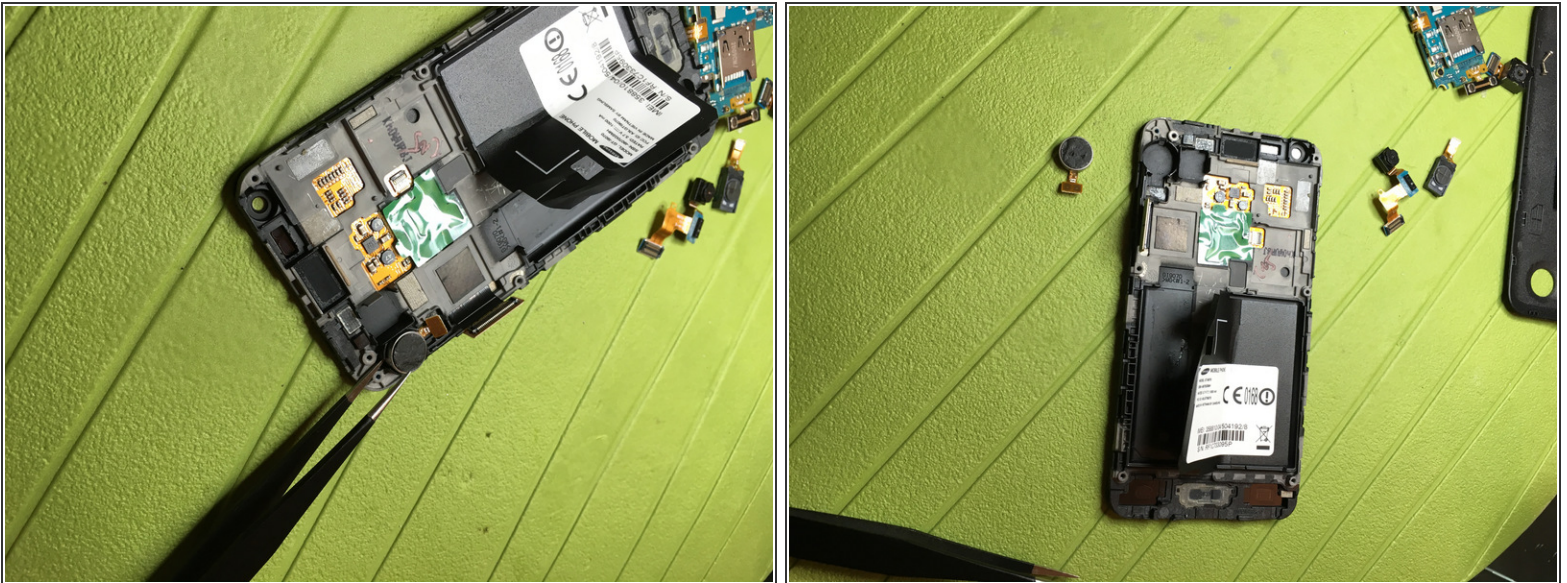


- remove vibration

Step 13

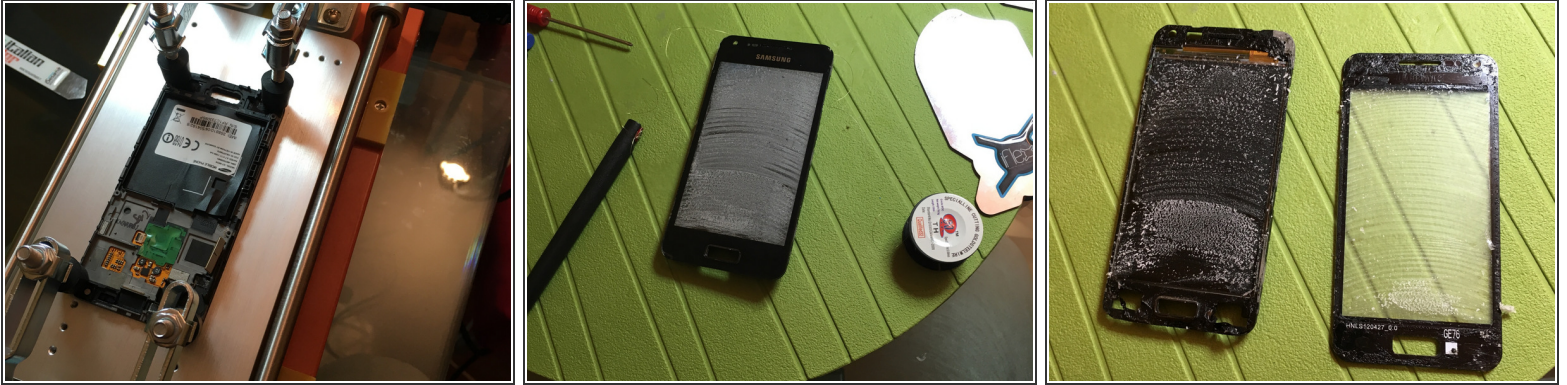

- Heat 80 degrees to separate from the front touch display glass

Step 14

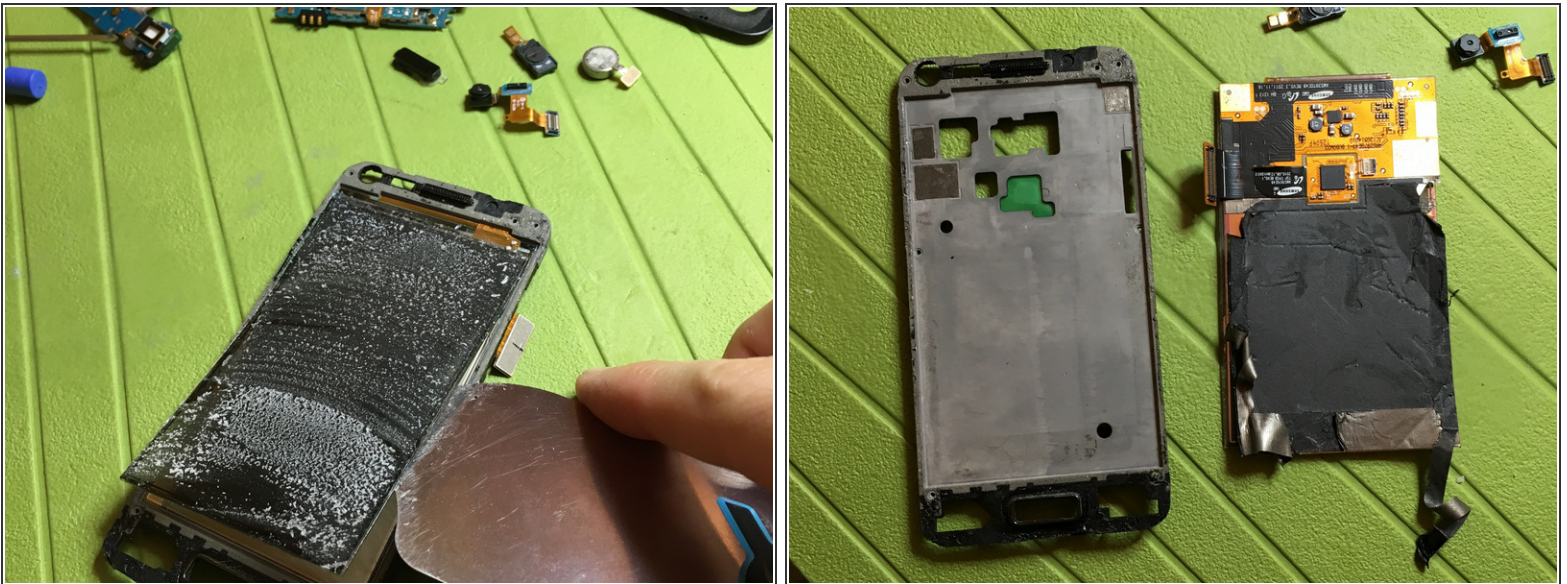

- Unhook touch display from homes



- Teradown completato